

Application Note


Document Number APL-00146

Updated 05/03/02 Rev-A




NAA-IV DB9 Front Panel Pin-Outs

RS-232

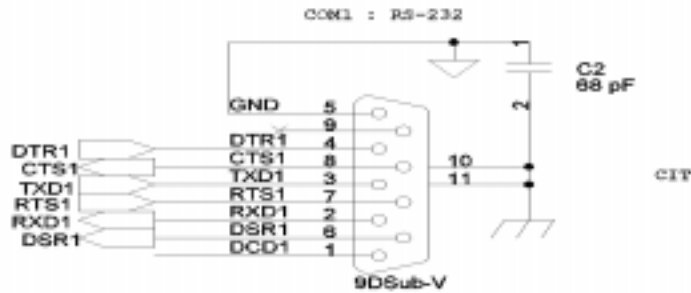

GND = Ground Return	RTS = Request to Send
DTR = Data Terminal Ready	RXD = Receive Data
CTS = Clear to Send	DSR = Data-Set Ready
TXD = Transmit Data	DCD = Data Carrier Detect

Ethernet

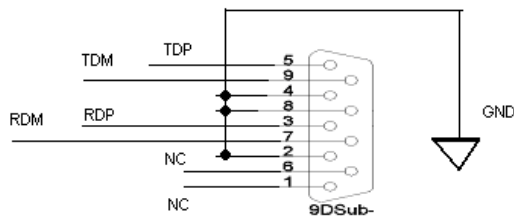

TDP = Transmit Data Positive	RDM = Receive Data Minus
TDM = Transmit Data Minus	NC = Not connected
RDP = Receive Data Positive	GND = Ground Return