


Application Note

Document Number APL-00010

Updated 04/29/99 Rev-A

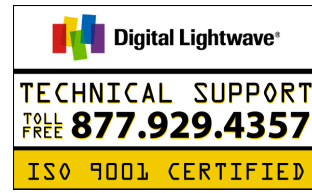

Using ATM for facility delay measurements

Measuring Facility delays in *ATM compatible* facilities.

If the facility is *ATM compatible* you can measure facility delays by using the QOS.
The test is very simple to run.

Test procedure:

- 1 Configure the test set for ATM on the Facility to be tested
- 2 Select the ATM Protocol Processor under Function Group select FUNCTNS then select QOS
- 3 In the QOS screen press Start
- 4 Read the CTD Cell Transfer Delay. This is the round trip delay for the ATM Cell.